

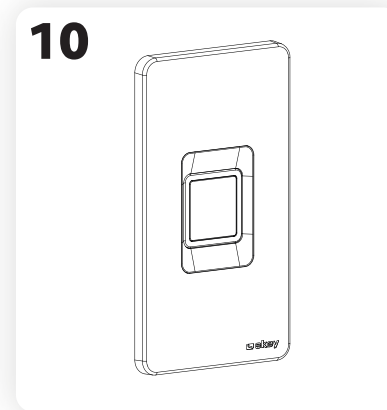
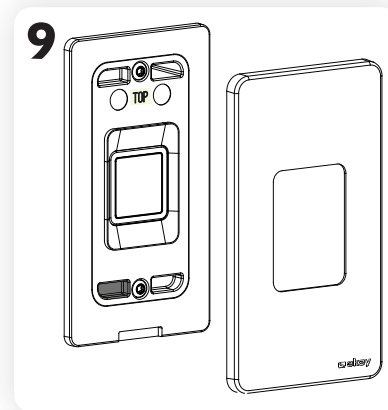
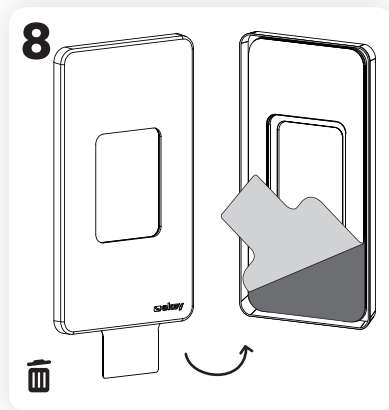
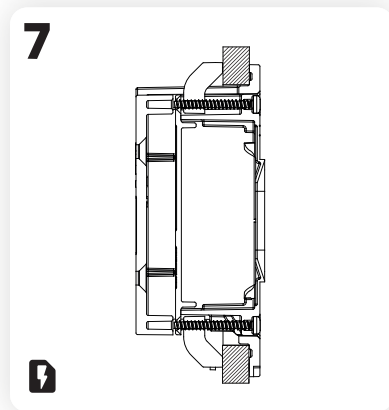
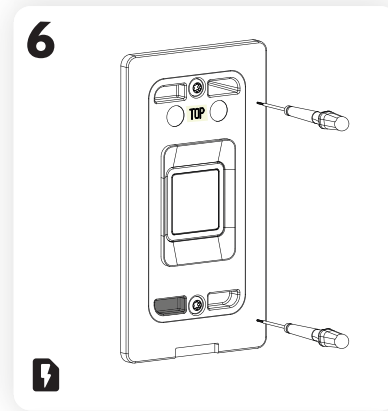
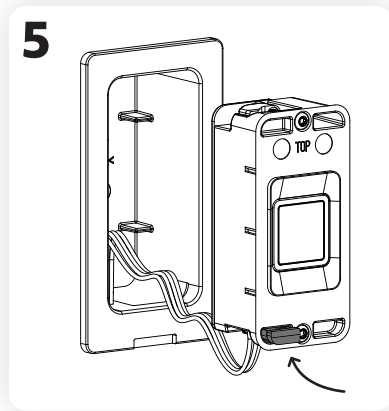
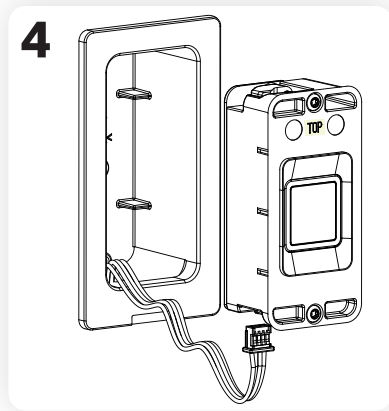


Mounting instructions ekey dLine fingerprint (hollow profile)

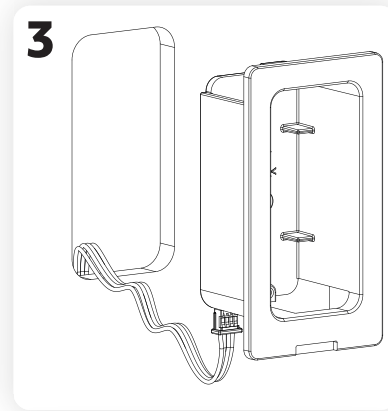

ID357/743/0/708: Version 1, 2020-10-02

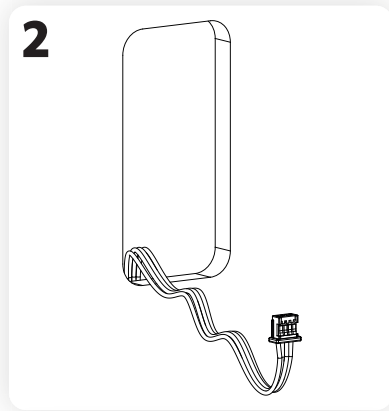

⚠ ATTENTION

Property damage in the event of incorrect mounting and wiring:
The system devices are operated using electricity. They could be destroyed if they are mounted and wired incorrectly. Mount and wire the system devices correctly before connecting the power.

📖 NOTICE

These Mounting instructions are not subject to updating. We reserve the right to make technical modifications and change the product's appearance; any liability for errors and misprints is excluded.

